

How to set up radio station logos


Since the N6 platform you have the possibility to insert logos of radio stations. These are shown on the display when the station has been saved. All you need is an SD/Micro-SD card to transfer the logos.

If you own a device of the „X-Series“ series, a USB stick is required. The micro-SD card or USB stick must be formatted in FAT16/32..


Proceed as follows:

1. Find radio stations in your Dynavin device and save them.
Sort the stations as you wish and remember the position of the stations.
Example: SWR3 in memory location FM1.
2. Insert a MicroSD card (for the „X-Series“ a USB drive) into your computer.
You may need an SD card adapter for this.
3. Logos for FM/AM stations: create a folder on the card called „RADIO“.
Logos for DAB+ stations: create a folder on the card called „DAB“.


Note that the letters are all capitalised.

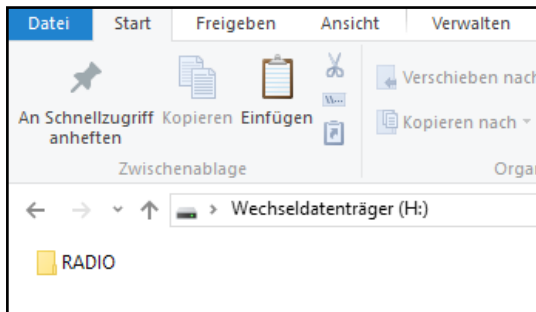

FM logos must be stored in the RADIO folder

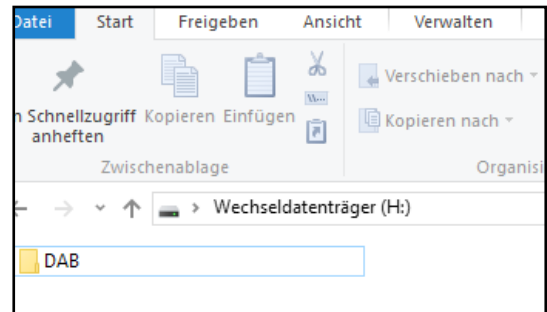

DAB logos must be stored in the DAB folder

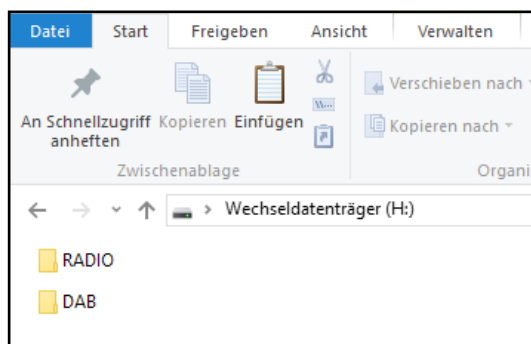

If you want to store FM and DAB logos, these two folders must be located in the root directory of the SD card

4. Download the logos of the radio stations you want to use.
You can find them on the homepage of the radio stations or on the Internet.
These files are not provided by Dynavin!

Please note: The size of the logos must not exceed 122 x 92 pixels.
You may have to edit the images to adjust the size.

Image format: jpg, bmp or png

5. Change the name of the logos. All names in capital letters please.
This will allow the machine to recognize which logo is displayed on which broadcast position.

FM stations: FM1 to FM15

AM stations: AM1 to AM15

DAB stations: DAB1 to DAB10

The file name then also stands for the station memory location.

Example: Station SWR3 is stored on station FM1.
Save the logo of station SWR3 with the file name FM1.

6. When you have done this with all the stations for which you want to have a logo displayed, insert the SD card or the USB stick into the card slot of the Dynavin unit. Only use the MMC card slot (for the „X-Series“ the „MEDIA“ USB interface) of the device, since only via this slot the information is retrieved.
After inserting the SD card, the information is retrieved and the logos are displayed.

Please note: as soon as you remove the card or USB stick, the logos are no longer displayed.