




**MOST AGW**

# INSTALLATION GUIDE

**For Mercedes:**

- » SLK (R171 till ca. 03/2008 before Facelift Modell)
- » E-Class W211 oder S211
- » CLS (C 219)

1

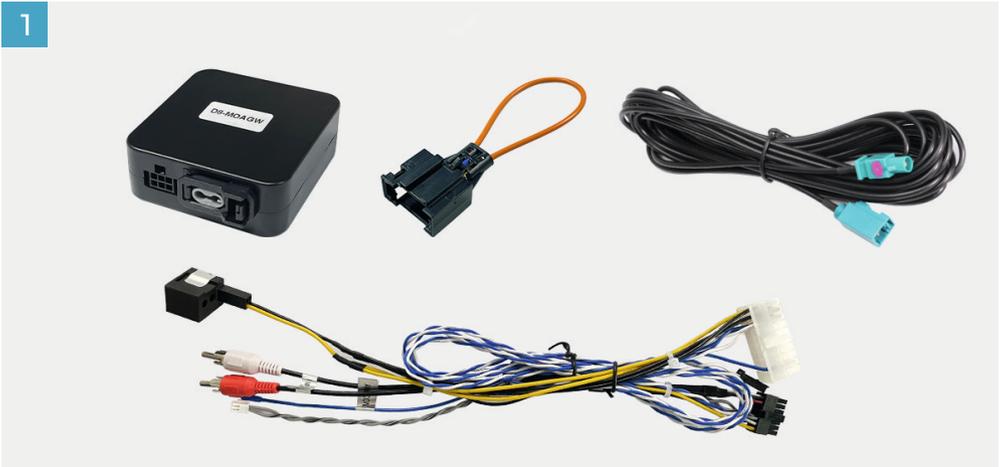

1. replace the original unit
2. remove all connectors
3. plug in the Most Adapter

## Canbus distributor within Mercedes SLK

2



Remove the screws from the panel on the drivers side footwell with a torx screwdriver (2x T20/T25 Torx). One of the screws is placed in the middle, the other on the top. Carefully remove the plastic cap above the screw in the middle with a screwdriver or pocketknife. Pull out the sidepanel to the bottom left. It is anchored with other parts.



Raise the carpet and unhook the lid from the black plastic channel. The lid is hold with plastic hooks (marked).



Now you see the canbus distributor. Pull out the marked distributor to the top.


## Canbus distributor within Mercedes MBE and CLS




Remove the two marked screws (T20/T25) to remove the panel under the glovebox. The canbus distributor is placed on the left side.



Picture shows original fibre optic cable.

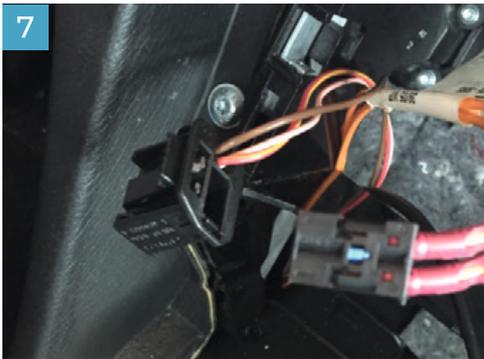

Pull out the MOST line from the original fibre optic cable.

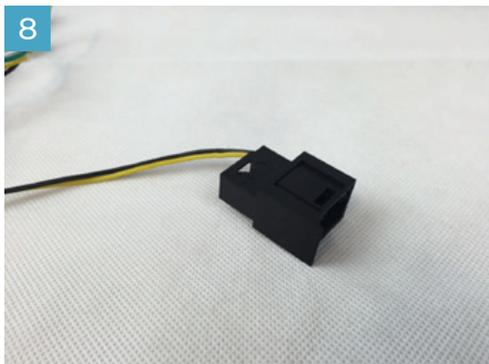

8  
After you disconnected the MOST line connect the fibre optic cable (without the most line) with this mating part.



9  
Connect the pulled out MOST line with this housing. After you've done this connect it with the Most Adapter.



10  
Place this cable on any free place within the canbus distributor. Where you can find the different canbus distributors is shown in picture 2-5.

11



Connect the cable to the Dynavin unit as shown in the picture.

12



Pull out the radio antenna from the AGW (black connector).  
Connect it with the extension cable from the delivery content and run the cable to radio.





[www.dynavin.de](http://www.dynavin.de)

**Dynavin GmbH**

Siemensstr. 7  
76316 Malsch  
Germany

[www.dynavin.de](http://www.dynavin.de)

© 2024 Dynavin GmbH

