

OWNER'S MANUAL

Contents

General Information	5
Instructions for the Intended Operation	6
Technical Features	
Wiring Diagram	8
First Step	10
Main Menu	10
System Settings	
Overview of the System Settings	
Backup Camera Enable	
System Language	
Color	
Set Multifunction	
Brightness	
Time Zone	
Factory Reset	
Radio Menu	
Overview of the Buttons	
Save Radio Stations	
Settings	
Phantom Antenna Power	
Save Radio Station Logos	
Phone Menu	
Overview of the Buttons	
Connect Phone	
Setup	
Contacts	
Search Contact	
Favorites	
Sound Menu	
Sound Settings - Menu	
Fade - Balance - Delay	
Bass - Middle - Treble	
Equalizer	
Source Volume	
Navigation	
Navigation Start-Up	
Change Media Source	
BT Audio	
Media Overview - Current Title	
USB	
Media Overview - Current Title	
Library	
Songs	
Albums	
Artists	
Now Playing	
Picture	
Video	
Folder	
Z-Link (Car-smartphone connectivity)	
Wireless Apple CarPlay	
Android Auto	
Wireless Mirroring	
Wired Mirroring	
Setting	

Contents

Apps Menu	. 39
Apps Menu	39
Uninstall the App	39
Move the App to the Main Menu	39
File Menu	40
File Menu	. 40
Transfer File	41
Edit File	41
Vehicle (Only for VW & Skoda vehicles with MQB platform)	. 42
Firmware Update	. 42
Troubleshooting	44
Error message within the GPS navigation	. 45

Declaration of Conformity

Dynavin GmbH hereby confirms that this product complies with the essential requirements of all relevant directives and regulations in force in the European Community. ϵ

The declaration of conformity can be downloaded from our website.

General Information

During the development of this product, special attention was paid to your personal safety, combined with the greatest possible ease of use, modern design and current production techniques.

However, despite all due care, it is possible that improper installation or incorrect operation may result in personal injury or damage to property.

Therefore, please read these operating instructions carefully and completely and keep them in a safe place.

This product complies with the requirements of the applicable European and national directives.

Conformity has been proven, the corresponding documents and declarations are on file with the manufacturer

We reserve the right to make unannounced product-related changes at any time in the interests of technical progress and adaptation to the vehicle market.

Check the legal regulations of your country before installing the device. Failure to comply with the legal requirements may result in significant penalties.

In the case of warranty claims, the device must be sent to us in the original packaging with the enclosed proof of purchase and a detailed description of the fault. Please note the return regulations on our website www.dynavin.de/en/return-of-goods-rma (RMA procedure). The legal warranty regulations apply.

Despite all efforts, not all vehicles or equipment variants of the vehicles can be guaranteed that the products offered and specified by us are 100% compatible. If you have any questions regarding product compatibility, please feel free to contact us at any time. Our expert staff in the service area will help you further

If the electrical system of your vehicle suddenly shows irregular or faulty function, disconnect the product from the vehicle electronics and contact a specialist workshop for inspection.

Dynavin is not liable for any direct or indirect consequential damage or loss, nor does Dynavin assume any possible installation and removal costs and/or diagnostic fees.

All steps necessary for installation are carried out at the customer's request, with the knowledge that a possible incompatibility may be present or that the product used may fail due to operational reasons.

The warranty claim and the operating permit expire due to:

- 1. unauthorized modifications to the device or accessories that have not been carried out or approved by the manufacturer
- 2. Opening the housing of the device
- 3. Self-performed repairs on the device
- 4. Improper use / use not in accordance with the intended purpose
- Accidental damage (including but not limited to dropping the unit, willful destruction, vehicle accident, etc.)

Observe all safety-related and legal regulations during installation.

For these reasons we recommend:

Do not install the device without knowledge in this area and consult a car audio specialist. Installations may only be carried out in a de-energized state. For certain installations, the vehicle battery must therefore be disconnected from the vehicle electrical system. Pay attention to the regulations of the vehicle manufacturer, as interference with the vehicle electronics can lead to loss of the vehicle warranty.

Never use safety-related connections or attachment points, such as steering, braking systems or other vehicle-related safety components, as doing so may endanger your own safety while driving and that of other drivers.

Only connect the device to the vehicle-specific power supplies and ground points specified by us. Avoid changing any settings on the device that could distract you from driving safely and cause you to endanger yourself and/or other drivers on the road.

Instructions for the Intended Operation

Only use the device in the location intended for it. In case of improper use, improper installation or modifications, the operating permit and the warranty will become void.

The instructions listed here apply to most, but not all products equally! If you have any questions about this, please contact your dealer.



Risk of damage to the electronics. Never open the housing of the device unless instructed to do so by the manual or the service team. Otherwise the warranty will be voided.



Always have repairs carried out by our service partners only! Devices repaired by yourself will void the warranty!



Attention! Never overload the power connections or extension cables. Fire hazard!



Attention! Never insert foreign objects into the openings on the housing! The objects can damage the electronics or cause short circuits.



Attention! If cables or connectors of the item are damaged, de-energize the item and contact your dealer. Danger of fire or electric shock.



Attention! In case of smoke, noise and/or odor development, switch off the device immediately and disconnect it from the power supply. Do not continue to use the device! Contact your dealer!



Attention! Do not expose the device to direct sunlight or other heat sources! Never install the device near radiators, hot air hoses or other heat sources.



Attention! Ensure sufficient air circulation to avoid damage to the device components. components. Do not cover any opening of the device.



If you need to replace a fuse, switch off the device and disconnect the power supply. Only use fuses of the same rating as replacements.



Attention! Do not place magnets or magnetic tools on the items. This may cause damage to the item or loss of data.

Technical Features

General

CDII

Operating System: Android with proprietary

Software 833MHz

External Connections: Video Out / Audio Out / A/V

IN / DAB+ Connection

Equipment

Direct Access Keys: Yes
Key tones: Yes
Bluetooth Module: Yes
Navigation: Yes

USB: Yes (1x Mirror Link and 1x Media)

SWC connection: Yes
Update: Yes
Dual Zone: Yes
Camera Input: Yes

Camera lines: Yes (Switchable)

Amplifier Remote: Yes
Dim Function: Yes

Display

Size: 7" / 9" or 10"

Display Format: 16:9

Touch Function: Yes, Capacitive Touch

Resolution: 1280*720px Brightness Slider: Yes Color Saturation: Yes

iPhone Connection: Yes (By Media USB)

вт

Hands Free: Yes A2DP: Yes

Phonebook: Yes, to 1000 Contacts

Favorites: Yes

Audio (DSP)

Max Output: 4x45W Bass Boost: Yes Amp Output: Yes AV IN: Yes AV Out: Yes Sound Setting: Yes Balance/Fader Yes Output Level: 4\/

Sound Settings: - Subwoofer Control

- Dyna Bass Settings - Bass Center Frequency Setting - Bass Adjustment - 9-Band EQ - Time Correction


USB

USB Standard: USB 2.0


Playback: MP3 / AAC / WMA /AVI
Selection option: Album / Artists / Songs /
Podcast / Audiobook

Alphabetical Search: Yes Operation via Touch: Yes

Only for customers in Europe

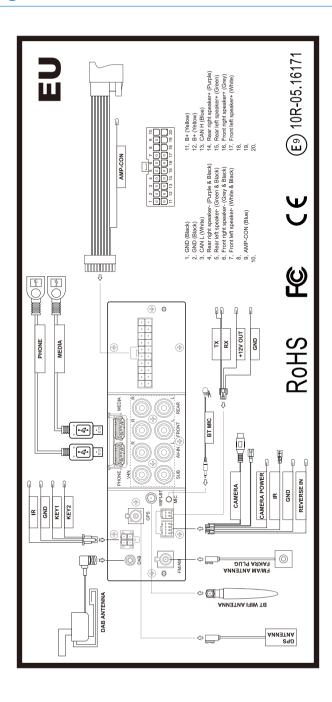

Only for United States customers

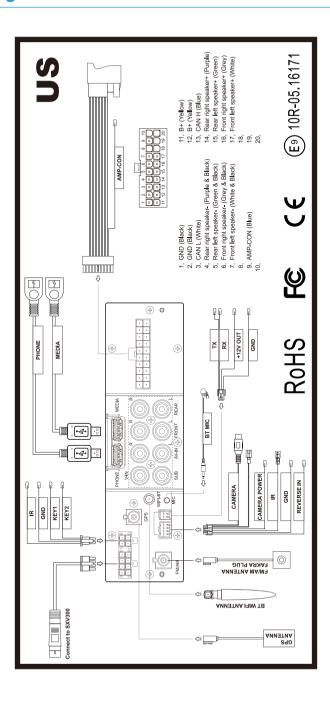

First Step

If you have connected the device as indicated, turn on the ignition of the vehicle. The Dynavin will then boot-up. This may take about 30 seconds the first time. It will begin on the radio screen.



Functionality of the Touch Screen

Most functions are controlled via the touch screen. With capacitive touch technology, the device can be operated as intuitively as your smartphone.

Main Menu

The main menu is divided into two pages.



Page 1



Page 2

You can switch between the pages in the main menu as follows:

- 1, by pressing on the page navigation lines (in the lower middle area of the main menu)
- 2. by swiping with your finger (to the left or right)

You can change the position of the function icons on the main menu:

Long press the icon and drag it to where you want to place it, and release your finger when the two icons overlap.

(Note: Radio icont, Z-Link icon and Apps icon cannot be moved)

Pressing one of these functions takes you to the respective menu:

Radio = Radio menu access

Media = Media Menu (USB or BT) access

Z-Link = Access compatible CarPlay/Android Apps apps via the device

Phone = Phone menu access
Navigation = Navigation starting

Sound = Sound settings / Tone settings

Vehicle = Display vehicle-related data

Apps = Access application service menu

Camera = Switches the camera on (optional)

File = File menu access
Info = Firmware update
System = System Settings
WiFi = WiFi / Hotspot Settings

= Activates the voice assistant on your smartphone (e.g. Siri or Google Assistant)

= Quick access to the media menu being played

= Mute device sound

Click to show all open applications in the background of the device.

(Press and hold the Multifunction button or Home button on the front panel for 2 seconds to view all open applications running in the background.)





You can click "X" or swipe left or right to clear the application.

If you want to clear all applications, swipe down on the screen and click the " CLEAR ALL " button at the top.

On the following pages we will go into more detail about the individual menus.

^{*}The blue line indicates which page you are currently on. In the picture above it is on the main menu page 2.*

Overview of the System Settings





Backup Camera Enable:

If only one rear camera is installed and this option is deselected, nothing will happen when the reverse gear is engaged. The screen will remain in the menu you are currently in. Select this option, to enable the rear camera video when in reverse gear.

System Language:

Set your desired device language. 14 languages selectable

Color:

Select a color to change the color of the lines and icon borders on the screen.

4 colors available:



Set Multifunction:

You can program the " button to create a shortcut to a preferred function or mode. Once programmed, simply press the " button to instantly access it.

Brightness:

You have several ways to adjust the brightness and control. This includes the dimming function. First, touch the down arrow key right of the menu item labeled Manual / Auto Illumination.

Depending on the selected function, another option in the settings may be unlocked.

Manual = Manually adjust the backlighting

Auto Illumination = Automatic dimming function (on when lights are turned on)

Time Zone:

In this menu you can set the time zone in which you are located. For example, Germany: winter time (UTC \pm 1:00) and summer time (UTC \pm 2:00).

System Settings

In the system settings you can change some of the basic options and settings of the device. Briefly tap the box next to the words to enable the option.

A checkmark " \(\sigma \)" indicates that the option is selected.

☑ Brake

With **Brake** deselected, video playback or DAB-T will be inhibited so that you are not distracted while driving. When you engage the handbrake, the image below will be displayed informing you that video playback is not allowed while traveling.



If you want to activate the video while traveling, select the Brake option.

Note:

Inform yourself about the requirements and legal regulations in your country. If you activate this option without permission, this can lead to considerable fines.

This is a setting that is not activated by Dynavin for general use and does not assume any fines.

This setting is activated only by the user and owner, and the latter therefore assumes all responsibility of activation.


Factory Reset

Resets the system to factory settings.

To open the radio menu press the "Radio" button in the main menu



Overview of the Buttons

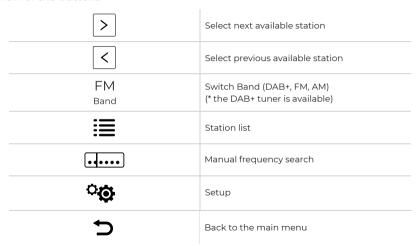

The current station is outlined in color. A total of 15 stations can be stored in the FM range, whereby the memory locations 11-15 are for the automatic station search (APS). If you have stored stations in one of these memory locations, they will be overwritten during the next search.

The memory locations 1-10 are available at any time for manual storage.

Memory - Switch pages

5 memory locations are displayed per page. To switch to another page, press the respective line directly below the memory locations:

Line 1 = memory stations 1-5

Line 2 = memory stations 6-10

Line 3 = memory stations 11-15 (are overwritten by the automatic station scan)

Save Radio Stations

If you want to save a radio station, press and hold the desired station for approx. 1-2 seconds. The station can then be stored via this memory location.

Settings



To activate or deactivate a function, click on the respective button.



High-Cut (Reduce radio noise):

The High-Cut - function causes an automatic change from stereo to mono signal.

AF = Alternative Frequency:

If this option is activated, the radio automatically searches for an alternative frequency when the station becomes weaker.

TA = Traffic Announcement:

If this option is enabled, traf c messages are automatically imported into the running program. The value behind it (in the example Vol +3) increases the current volume by 3 volume steps.

RDS Text:

When this function is enabled, information can be transmitted from the radio station to your radio. Like for example information about the played music track or information about the current program, as well as the station name.

Phantom Antenna Power:

When radio signal is weak, you can select Phantom Antenna Power to power the radio antenna.

Padio Menu

Save Radio Station Logos

For saving radio station logos a USB device is required. The USB device must be connected to the Media USB cable to display them. In addition to logos, there can be other files on the USB device, such as music, videos, pictures, etc.

The radio station logos are not provided by us.

Steps

- 1. Download the desired station logos from the Internet or from the station's website.
- 2. Connect a USB device to the computer.
- 3. Create a folder "RADIO" on the USB device for FM/AM memory locations and/or a folder "DAB" if you also want to store station logos for digital radio. The letters must all be capitalized.



- 4. If you want to save FM and DAB logos, these two folders must be located in the root directory of the USB device
- 5. For the file size, make sure that the images do not exceed an aspect ratio of 122x92px. You may still need to edit the images to adjust the size.
- 6. The files must be saved in .jpg/.bmp or .png format.
- 7. Now change the name of the logos to FM1 (DAB1) to FM15 (DAB15) or AM1 to AM15. Make sure that these are capitalized again. The file name then stands at the same time for the transmitter memory location.



8. In the image, FM1 stands for the first station in the FM range.
This image is stored for this station. FM2 is stored for station no.2 etc.


If the stations are stored in a new order on the device, the images would have to be renamed or changed accordingly.

After you have successfully saved all the logos, insert the USB drive into the Media USB port. The data will be retrieved automatically and the station logos will be displayed.

You can access the "Phone" menu from the main menu



Overview of the Buttons

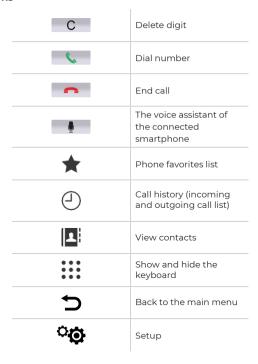

Phone Menu

In order to use the phone or Bluetooth function, first connect your smartphone to the device.

Connect Phone

Activate Bluetooth on your smartphone and go to the Bluetooth settings. Start a search and connect to the Dynavin device.

Bluetooth Name of the device: Car BT

You will be prompted to enter a PIN on your smartphone. The PIN code appears on the display (under Setup) of the device. Enter the PIN code on your smartphone. This is only necessary when connecting the smartphone for the first time. After the smartphone has been paired with the device, it will be automatically detected and connected.

Once the smartphone is successfully paired with the device, this is visually shown on the display.



MyPhone	Stored name of the smartphone	
attl	Reception strength	
	Smartphone battery level	
Ð	Back to the main menu	

Setup





BT Name and PIN Code

Search in the Bluetooth menu of the smartphone for: Car BT and connect to it.

When you pair a smartphone with the device for the first time, you will be prompted on your smartphone to enter a PIN code. The PIN code appears on the display of the device under "**Setup**".

Phone voice control activation by SWC

A checkmark " " indicates that the option is selected, you can use voice call from the SWC (steering wheel controls) once selected. Only voice commands that your voice assistant recognizes from the smartphone can be processed.

Select telephone

The Dynavin unit remembers the connected phones. Select one to connect.

Search Mode

Changes how the phonebook contacts are displayed by either first name or last name.

Microphone Gain

Raising or lowering the volume fader either boosts or cuts the signal from the microphone. To do this, press the fader area. A large fader appears. Drag in the desired direction.

Phone Volume

The phone volume can be adjusted either by the left rotary knob during a call, or via this menu item independently of a call. To do this, press the fader area. A large fader appears. Drag in the desired direction.

Bluetooth Reset


This menu item resets everything related to the phone menu to the factory settings.

Contacts



Use this menu option to bring up the contact list. As soon as you press a contact, a popup opens. The displayed contact with the stored phone number is called via the telephone key.



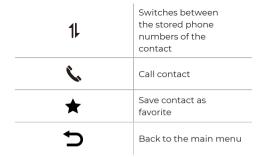


Search Contact



Press the Search button to open the search function



Search for contact

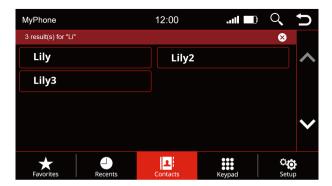


Search results

Favorites



As soon as a contact has been saved as a favorite, it is transferred to the favorites list. To open the favorites list press the "Favorites" button in the menu bar.



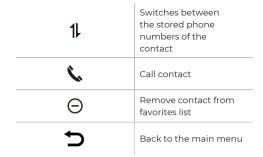

Sound Settings - Menu





Fade - Balance - Delay:

In this menu you can adjust settings for the delay correction and the acoustic center.

A more detailed explanation can be found on page 25.

Bass - Middle - Treble:

This menu allows you to adjust the highs, mids and lows of your sound system.

For a more detailed explanation, see page 26.

Equalizer:

In this menu you have the ability to tune individual frequency ranges.

A 5-band equalizer is available for this purpose. Save your settings via the "User" icon.

For a more detailed explanation, see page 26.

Source Volume:

In this menu you can make volume adjustments for each of the different media sources (e.g. radio, USB). A more detailed explanation can be found on page 27.

Navigation Volume:

Use the fader to adjust the volume of the navigation announcements.

You can do this additionally via the right knob, but only during an announcement.

Confirmation Tone:

Set the volume of the key tones. Activate the field with a check mark. Then press on the fader in the right column and drag it to the desired volume.

Warning Tone

This option is specifically for the BMW E9X and E8X. If you select this option you can hear warning signals through the speakers. The warning beep includes seat belt reminders and so on.

OE DSP AMP:

Activates the factory DSP system if-equipped. This menu item only appears on vehicles that may have a DSP sound system installed. Press the fader in the right column and drag it to the desired volume.

Factory Amplifier HiFi:

In some vehicles with factory installed amplifiers, the power output from our device may be too high. You can lower the output level with this setting.

Loud

Boosts the bass and treble to achieve an amplification effect. Place a checkmark to the left of "**Loud**" to activate this function.

Fade - Balance - Delay

Overview of the icons



In this menu you can set the delay correction of the individual speakers:

FL = Front left


FR = Front right

RL = Rear left

RR = Rear right

< ▶	Adjust the specified area	
	Control pad or fader for setting the acoustic center.	
	The circle in the center of the control pad resets the acoustic center setting.	
LHD Default	Back to default value	
RHD Default	Back to default value	
Þ	Back to the main menu	

Bass - Middle - Treble

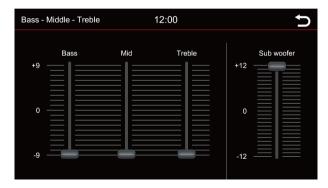


In this menu, you can adjust the treble and bass of your sound system.

With the four controls shown, you can adjust the bass, treble and midrange, and if a subwoofer is connected, you can also adjust it by simply moving it around.

You can move the slider to the desired position by scrolling up and down. To do this, press the slider down. You know the control is selected when the blue bar turns red.

Equalizer

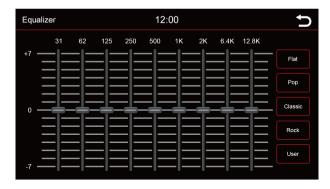

In this menu, you can choose to tune a single frequency range within a certain range. You can do this in nine different frequency ranges.


However, you can also select some preset values such as Flat, Pop, Classic, Rock, or if you select the User button, you can make your own personal settings.

Press and hold "User" button to save your personal settings.



You can move the slider to the desired position by scrolling up and down. To do this, press the slider down. You know the control is selected when the blue bar turns red.

Source Volume

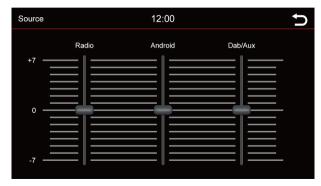

Here you can adjust the volume level of various sources. In the 0 range, the radio's set volume is used. In the range above or below 0, it is automatically adjusted by this level. Automatically adjusts by this level.

You can move the slider to the desired position by scrolling up and down. To do this, press the slider down. You know the control is selected when the blue bar turns red

Navigation

Navigation Start-Up

When you start the navigation for the first time, it may take several minutes to load. Also, you must first set some options of the Navigation software like Language, Time, and Voice. For all the functions and options of the navigation software, please refer to the manual for the navigation software.

Change Media Source





Press "BT Audio" on the top left to change the media source.

A dropdown appears:

Active source = highlighted in red (in the example above BT Audio)

Grayed-out source = source not connected (i.e. "USB" in above right image)

Red highlighted source = source connected and ready for playback

Select the desired playback source in the dropdown.

Media Overview - Current Title



The image shows the Bluetooth Music Streaming menu.




Select the desired playback source in the dropdown.

Media Overview - Current Title



The image shows the USB menu (the menus are identical in structure).

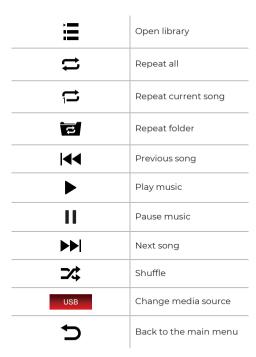




Library



The above image shows the library overview which will display all of the file names in that source.

As soon as you switch to the Library Overview, you will be shown all of the files on the selected playback source. Switch to the respective category to display e.g. only music, only videos or only images.

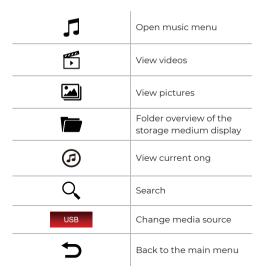


USB

Songs



The above image shows the song overview which will display all of the music files in that source.

Once you select the "**Songs**" menu, you can sort by albums, artists, or tracks by press the corresponding icon. Tap the desired title to play it.

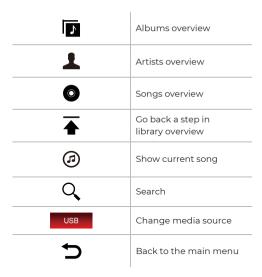

Albums





The images show a closed folder structure on the left and an open folder structure on the right.

Scroll to the desired album using either the arrow keys or your finger. After you have selected an album you will be shown all the tracks that are in this album.

Tap the desired title to play it back.

Artists





The images show a closed folder structure on the left and an open folder structure on the right.

Scroll to the desired artist using either the arrow keys or your finger. After an artist has been selected, all tracks of the artist will be displayed to you.

Tap the desired title to play it back.

Now Playing



Click the "Now Playing" icon and you will be back to the playing menu.

△ Picture



Tap an image to view it in a larger format. Here you can also save an image as the startup image (boot logo). This image will then be displayed when you start the device.





Switch to the standard view



Save as startup image

Delete / reset start imageTo reset a startup image, switch to the system settings in the main menu and press the "**Reset startup image**" icon.







When the "Video" overview is selected, you will see all videos that are on the playback source.

Scroll either with the arrow keys or finger to the video you want and tap the title to play it.

While the video is playing, the following buttons will be available to you:





	Open library	▶▶	Next
\$	Repeat all	*	Shuffle
=	Repeat current video	>	More functions
ह	Repeat folder		Stop
44	Previous	>>	Fast Forward
>	Play	#	View / Play
	Pause music		

USB

Folder



The folder overview shows the complete directory of the playback source displayed alphabetically.

Using the search function, you can quickly access the file you are looking for. Press " 🕱 " to hide the keyboard.



Z-Link (Car-smartphone connectivity)

Wireless Apple CarPlay



Before using wireless Apple CarPlay, turn on the BT function on your smartphone device Connect your smartphone to Dynavin unit via Bluetooth (Operation see page 19). After successful pairing, the device will automatically access the Apple CarPlay. Then you can control the smartphone via the Dynavin unit.

Android Auto

Connect your smartphone to the Dynavin unit via USB and click the "**Z-Link**" icon on the main menu to access the Android Auto menu.

Wireless Mirroring

You can display your smartphone's screen on the Dynavin's screen using the Wireless Mirroring function.





Click "Z-Link" on the main menu and click the " icon on the CarPlay / Android Auto menu to access the Wireless Mirroring menu. Then select your smartphone type.

Z-Link (Car-smartphone connectivity)

For iPhone users, please refer to the following steps:



Stepl: Turn on the hotspot on your iPhone.

Step2: Click the "Wifi Settings "button on the Dynavin unit. The unit will jump to the WiFi menu. Find your phone's Hotspot in the WiFi menu and connect.

Step3: Click "Screen Mirroring" on your iPhone and select "Z-Mirror".

For Android smartphone users, please refer to the following steps:





Step1: Use your Android smartphone to scan the QR code on the menu to download the necessary app.

Step2: Pair your smartphone with Dynavin unit via Bluetooth(Operation see page 19), and turn on your phone's hotspot on your Android phone.Click the " > " button on the unit to continue.

Step3: Click the " Wifi Settings > " button on the unit. The unit will jump to the WiFi menu. Find your phone's Hotspot in the WiFi menu and connect.

Step4: Click the "Start Screen Projection" button on your Android phone.

Z-Link (Car-smartphone connectivity)

Wired Mirrorina





Click the '



" button in the Wireless Mirroring menu to access the Wired Mirroring menu.

For iPhone users, connect your iPhone to Dynavin unit via USB. The following message will appear on your phone, click "Trust" to start mirroring.



For Android smartphone users, please refer to the following steps:



Stepl: Use your Android smartphone to scan the QR code on the menu to download the necessary app.

Step2: Connect your Android phone to Dynavin unit via USB. And pair your Android phone with the Dynavin unit via Bluetooth(Operation see page 19).

Step3: Click the "Start Screen Projection" button on your Android phone.

Z-Link (Car-smartphone connectivity)

Setting





Driver Position (Effective next time) = Left-hand drive and right-hand drive suitable for different countries' driving positions.

Floating Navigation = Turn OFF to ON, the "**Z-Link**" application button will float in any menu and can be quickly accessed by clicking on it.

HD = HD option.

Background Connection = When OFF, connection is only possible by accessing the "**Z-Link**" menu. When turned on, background connection is allowed.

Default Connection Type = Connection type memory.

Apps Menu

Apps Menu



Uninstall the App





Long pressing the app will appear "

" icon.

Click the " or icon to go to the final confirmation uninstall window.

Move the App to the Main Menu



Long press the app icon and drag it outside the Apps window. This app icon will be moved to the last position in the main menu after you release your finger.

If you need to move the app icon to a different location, release your finger when the app icon overlaps with the desired location.

File Menu

File Menu





	Create new folder		
Q	Search files		
•••	More Options (Select file or folder, Hide files and Sort)		
5	Back to the main menu		

File Menu

Transfer File

You can copy or transfer files from a USB Drive to the Internal shared storage. Long press the file name from the USB Drive and you will see the "Copy" and "Cut" options (If you need to deselect a file, you can click the file name again or click the " button).

After tapping the "Copy" or "Cut" icon, enter the "Internal shared storage" menu and click the "Paste" icon, the selected file will appear in the Internal shared storage.







Edit File

Long press the file name from the Internal shared storage / USB Drive, after clicking the " $\bullet \bullet \bullet$ " button you can delete the file, rename the file or view file details.



Vehicle (Only for VW & Skoda vehicles with MQB platform)

This function can only be used in VW & Skoda vehicles with MQB platform. The original vehicle settings are retained





The Dynavin unit offers the ability to display the vehicle information. The information displayed varies from vehicle to vehicle. The Dynavin has limited ability to read vehicle information. Vehicle information details cannot be given or quaranteed before the unit is installed.



Firmware Update

In the Info menu you can view the Dynavin's system information and the find the button to update the firmware.



Before Installing:

You only need to update the firmware if your Dynavin is not functioning normally or if you are explicitly instructed on Dynavin's homepage or by a Dynavin distributor to do so.

Each update will be installed at your own risk. Dynavin is not responsible for errors which may occur during the update resulting in the malfunctioning of the unit. Please ensure that during a firmware install that you have constant power to the unit and there is no power failure or other voltage fluctuations. This may interfere with the update process and make the unit unusable.

Use only media cards which are 100% failure free. If you use a defective memory card it is possible that the update will not be able to install or that the update will damage your unit.

Use only firmware updates for your Dynavin that are approved by Dynavin and are found on Dynavin's website. Visit www.dynavin.com for available updates and to determine whether your Dynavin requires an update.

Firmware Update

On the Dynavin homepage, follow the instructions for downloading the firmware.

Download the available update firmware for your Dynavin onto a USB 2.0 drive. (This drive must be formatted in FAT32. Please make sure to begin with a blank USB drive.)

You must extract the files and place them individually in the root directory of the USB drive(not in a folder).


Connect the USB drive to the USB-MEDIA extension cable

Click the Upgrade Now button: " Typgrade Now

If there is no update software on the USB drive or you did not first extract the files before copying them to the USB drive, you will get a message as pictured below.



Only when the system finds the correct files on the card will the update process begin.

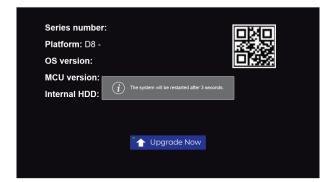

Once the system update software is detected, the small light in the top left corner of the "**Upgrade Now**" button will turn green. Once the button is pressed, the Dynavin will begin downloading the firmware (do not remove the USB drive). Once it has finished downloading, the unit will restart and install the update automatically. It is possible that you will see a black screen for a brief time. The whole process will take about 3-5 minutes. You can remove the USB drive after downloading has finished and the Dynavin has fully booted up.

The device freezes during a firmware update (or activation of an upgrade):

There is no need to panic. If you are sure that the files are properly present on the USB drive, keep pressing the RST button until you see the startup screen of the device.

The device will now boot directly from the USB drive with the update files.

If the update fails again, please check the files on the USB stick. Contact us if further assistance is needed.

Radio reception very poor:

If you feel that the radio reception is weak, check the radio antenna connection.

Ford: After SWC upgrade my steering wheel buttons do not work:

For Ford models, the steering wheel buttons must be taught in analog. To do this, go to the "System" settings and select the "Teach steering wheel" icon:

Press the desired function on the display of the radio (e.g. music louder).

Then press the button on the steering wheel to which this function (music louder) should be assigned. Perform the steps for all functions.

Hands-free: My microphone cannot hear me:

Make sure that the supplied microphone is properly connected and that the connector plug is not wobbly. If the plugs are connected correctly and the microphone is still not picking up your voice, please contact our support at info@dynavin.de.

Hands-free: The other party hears me very poorly and/or with interference noise:

Noise is generated if the microphone is mounted on the windshield, for example. This should be avoided. Otherwise, the microphone will pick up vibrations from the windshield.

If the microphone is attached to the A-pillar or directly to the ceiling light, you can try to increase the microphone gain via the settings in the "**Phone**" menu.

If this also does not lead to a satisfactory result, please contact our support at info@dynavin.de.

My smartphone no longer pairs with the device:

Reset the Bluetooth settings on the device and remove the Dynavin from the Bluetooth list of your smartphone. Reboot the Dynavin and reboot your phone. Then pair the smartphone again.

To reset the Bluetooth settings on the device, go to the "**Phone**" menu and press the settings at the bottom right of the menu bar. Scroll to the Reset Bluetooth item and press it. You can confirm that all Bluetooth settings have been reset if you do not see any smartphones paired under the "**Phone list**". If this problem persists, please contact our support at info@dynavin.de.

Error message within the navigation:

1 os exe error

Please contact us. We will go through some steps with you and send you a backup file. If the error still occurs, you can send the card back for repair.

2. MobileNavigator.exe error:

Please contact us. We will go through some steps with you and send you a backup file. If the error still occurs, you can send the card back for repair.

3. Out of Memory Error:

Delete the complete "**Save**" folder on the navigation map.
You can find this directly when you switch to the MobileNavigator directory.
You can delete this folder either directly on the device via the "**Folder**" menu, or on the PC.

4 Fatal Error

In case of a Fatal Error please contact us. We will perform a few steps with you.

5. license invalid:

This message only appears if you have copied the files from the original card to another SD card or the license is incorrect. The license is directly related to the serial number of the SD card. Make sure you always use the original SD card.

If your error is not listed above, please contact our support. We will help you further.

Mail: info@dynavin.de Tel: +49 7246 944 50 30

Copyrights

The Bluetooth word mark and logos are owned by Bluetooth SIG Inc. Other trademarks and trade dress are owned by their respective owners.

QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries. QR Code Generating Program Copyright © 2008 DENSO WAVE INCORPORATED. All rights reserved. All other software or product names used in this document are trademarks or registered trademarks of the respective companies by which they were developed. All forms whose program names are mentioned in this manual have special license agreements for the programs belonging to their property.

DynavinStereo GmbH assumes no liability for changes and printing errors within these operating instructions.



Disposal of old equipment:

Only for the European Union and countries with recycling systems.

This symbol, on the products, packaging and/or accompanying documentation means that used electrical and electronic products must not be disposed of with general household waste. Please take old products to the appropriate collection points for treatment, refurbishment or recycling in accordance with the legal requirements.

By disposing of these products properly, you will help to protect valuable resources and avoid any possible negative effects on human health and the environment.

For more information on collection and recycling, please contact your local waste disposal service provider. According to state regulations, fines may be imposed for improper disposal of this waste.

Dynavin GmbH Siemensstr. 7 76316 Malsch Germany

© 2022 Dynavin GmbH

All rights reserved.

Reprinting and reproduction, even in part, is prohibited.

The features of the products are correct at the time of creation of the print product. All display representations are simulated. The color of the products may vary. We accept no liability for any typesetting errors. We reserve the right to make changes.

REV 2022 / 03 / 20

